

EPOS2 P 24/5

Programmable Positioning Controller

Getting Started



epos.maxonmotor.com

Document ID: rel5875

PLEASE READ THIS FIRST



These instructions are intended for qualified technical personnel. Prior commencing with any activities ...

- *you must carefully read and understand this manual and*
- *you must follow the instructions given therein.*

We have tried to provide you with all information necessary to install and commission the equipment in a **secure, safe and time-saving** manner. Our main focus is ...

- to familiarize you with all relevant technical aspects,
- to let you know the easiest way of doing,
- to alert you of any possibly dangerous situation you might encounter or that you might cause if you do not follow the description,
- to **write as little** and to **say as much** as possible and
- not to bore you with things you already know.

Likewise, we tried to skip repetitive information! Thus, you will find things **mentioned just once**. If, for example, an earlier mentioned action fits other occasions you then will be directed to that text passage with a respective reference.



Follow any stated reference – observe respective information – then go back and continue with the task!

PREREQUISITES FOR PERMISSION TO COMMENCE INSTALLATION

The **EPOS2 P 24/5** is considered as partly completed machinery according to EU directive 2006/42/EC, Article 2, Clause (g) and therefore **is intended to be incorporated into or assembled with other machinery or other partly completed machinery or equipment**.



You must not put the device into service, ...

- *unless you have made completely sure that the other machinery – the surrounding system the device is intended to be incorporated to – fully complies with the requirements stated in EU directive 2006/42/EC!*
- *unless the surrounding system fulfills all relevant health and safety aspects!*
- *unless all respective interfaces have been established and fulfill the stated requirements!*

TABLE OF CONTENTS

1	About this Document	5
2	Introduction	9
	2.1 Documentation Structure	9
	2.2 Safety Precautions.	10
3	Installation and Configuration	11
	3.1 Important Notice: Prerequisites for Permission to commence Installation. . .	11
	3.2 Step 1: Software Installation	11
	3.2.1 Minimum System Requirements	11
	3.2.2 Installation	12
	3.3 Step 2: Hardware Presettings	12
	3.4 Step 3: Minimum External Wiring	13
	3.4.1 Minimum Wiring for maxon EC motor	14
	3.4.2 Minimum Wiring for maxon DC motor with separated Motor/Encoder Cable.	15
	3.4.3 Minimum Wiring for maxon DC motor with integrated Motor/Encoder Ribbon Cable . .	16
	3.5 Step 4: System Configuration	17
	3.5.1 General initial Steps.	17
	3.5.2 Configuration of EC Motors	21
	3.5.3 Configuration of DC Motors	23
	3.5.4 General closing Steps	25
	3.6 Step 5: Regulation Gains Tuning.	26
	3.6.1 Starting Regulation Tuning	26
	3.6.2 Auto Tuning the Current, Velocity and Position Regulators.	26
4	Programming	31
	4.1 Step 1: Opening Sample Project	31
	4.1.1 Open "IEC-61131 Programming"	31
	4.1.2 Open Sample Project	31
	4.1.3 Open Program Code	32
	4.2 Step 2: Programming Tool "OpenPCS" Configuration.	32
	4.2.1 Licence Key Configuration.	32
	4.2.2 Communication Setup	33
	4.3 Step 3: Compiling and Executing Sample Project	34
	4.3.1 Compiling Sample Project	34
	4.3.2 Downloading Sample Project.	34
	4.3.3 Starting Sample Project	34
	4.4 Further Information	34

••*page intentionally left blank*••

1 About this Document

1.1 Intended Purpose

The purpose of the present document is to familiarize you with the described equipment and the tasks on safe and adequate installation and/or commissioning.

Observing the described instructions in this document will help you ...

- to avoid dangerous situations,
- to keep installation and/or commissioning time at a minimum and
- to increase reliability and service life of the described equipment.

Use for other and/or additional purposes is not permitted. maxon motor, the manufacturer of the equipment described, does not assume any liability for loss or damage that may arise from any other and/or additional use than the intended purpose.

1.2 Target Audience

This document is meant for trained and skilled personnel working with the equipment described. It conveys information on how to understand and fulfill the respective work and duties.

This document is a reference book. It does require particular knowledge and expertise specific to the equipment described.

1.3 How to use

Take note of the following notations and codes which will be used throughout the document.

Notation	Explanation
«Abcd»	indicating a title or a name (such as of document, product, mode, etc.)
▣Abcd▣	indicating an action to be performed using a software control element (such as folder, menu, drop-down menu, button, check box, etc.) or a hardware element (such as switch, DIP switch, etc.)
(n)	referring to an item (such as order number, list item, etc.)
→	denotes “see”, “see also”, “take note of” or “go to”

Table 1-1 Notations used in this Document

1.4 Symbols and Signs

In the course of the present document, the following symbols and signs will be used.

Type	Symbol	Meaning	
Safety Alert	 (typical)	DANGER	Indicates an imminent hazardous situation . If not avoided, it will result in death or serious injury .
		WARNING	Indicates a potential hazardous situation . If not avoided, it can result in death or serious injury .
		CAUTION	Indicates a probable hazardous situation or calls the attention to unsafe practices. If not avoided, it may result in injury .
Prohibited Action	 (typical)	Indicates a dangerous action. Hence, you must not!	
Mandatory Action	 (typical)	Indicates a mandatory action. Hence, you must!	
Information		Requirement / Note / Remark	Indicates an activity you must perform prior continuing, or gives information on a particular item you need to observe.
		Best Practice	Indicates an advice or recommendation on the easiest and best way to further proceed.
		Material Damage	Indicates information particular to possible damage of the equipment.

Table 1-2 Symbols & Signs

1.5 Trademarks and Brand Names

For easier legibility, registered brand names are listed below and will not be further tagged with their respective trademark. It must be understood that the brands (the below list is not necessarily concluding) are protected by copyright and/or other intellectual property rights even if their legal trademarks are omitted in the later course of this document.

Brand Name	Trademark Owner
Adobe® Reader®	© Adobe Systems Incorporated, USA-San Jose, CA
CANopen® CiA®	© CiA CAN in Automation e.V, DE-Nuremberg
Internet Explorer®	© Microsoft Corporation, USA-Redmond, WA
Pentium®	© Intel Corporation, USA-Santa Clara, CA
Windows Vista® Windows®	© Microsoft Corporation, USA-Redmond, WA

Table 1-3 Brand Names and Trademark Owners

1.6 Copyright

© 2016 maxon motor. All rights reserved.

The present document – including all parts thereof – is protected by copyright. Any use (including reproduction, translation, microfilming and other means of electronic data processing) beyond the narrow restrictions of the copyright law without the prior approval of maxon motor ag, is not permitted and subject to persecution under the applicable law.

maxon motor ag

Brünigstrasse 220
P.O.Box 263
CH-6072 Sachseln
Switzerland

Phone +41 41 666 15 00

Fax +41 41 666 16 50

www.maxonmotor.com

••*page intentionally left blank*••

2 Introduction

The present document provides you with information on the first steps using EPOS2 P 24/5 Programmable Positioning Controller. It describes the standard procedure when putting the device into operation and is meant to facilitate installation and configuration of a basic EPOS2 P 24/5 system.

maxon motor control's EPOS2 P 24/5 is a small-sized, full digital and free programmable positioning control unit. Due to its flexible and high efficient power stage, the EPOS2 P 24/5 drives brushed DC motors with digital encoder as well as brushless EC motors with digital Hall sensors and encoder.

The sinusoidal current commutation by space vector control offers to drive brushless EC motors with minimal torque ripple and low noise. The integrated position, velocity and current control functionality allows sophisticated positioning applications. The EPOS2 P 24/5 is programmable with a very efficient software tool. The programming languages are according to IEC 61131-3 standard. The built-in CANopen interface allows the design of an easy-to-use standalone multiple axis system, particularly with standard maxon EPOS controllers. In addition, the unit can be operated via any USB or RS232 communication port.

Find the latest edition of the present document, as well as additional documentation and software to the EPOS2 P 24/5 Programmable Positioning Controller also on the Internet: →www.maxonmotor.com

2.1 Documentation Structure

The present document is part of a documentation set. Please find below an overview on the documentation hierarchy and the interrelationship of its individual parts:

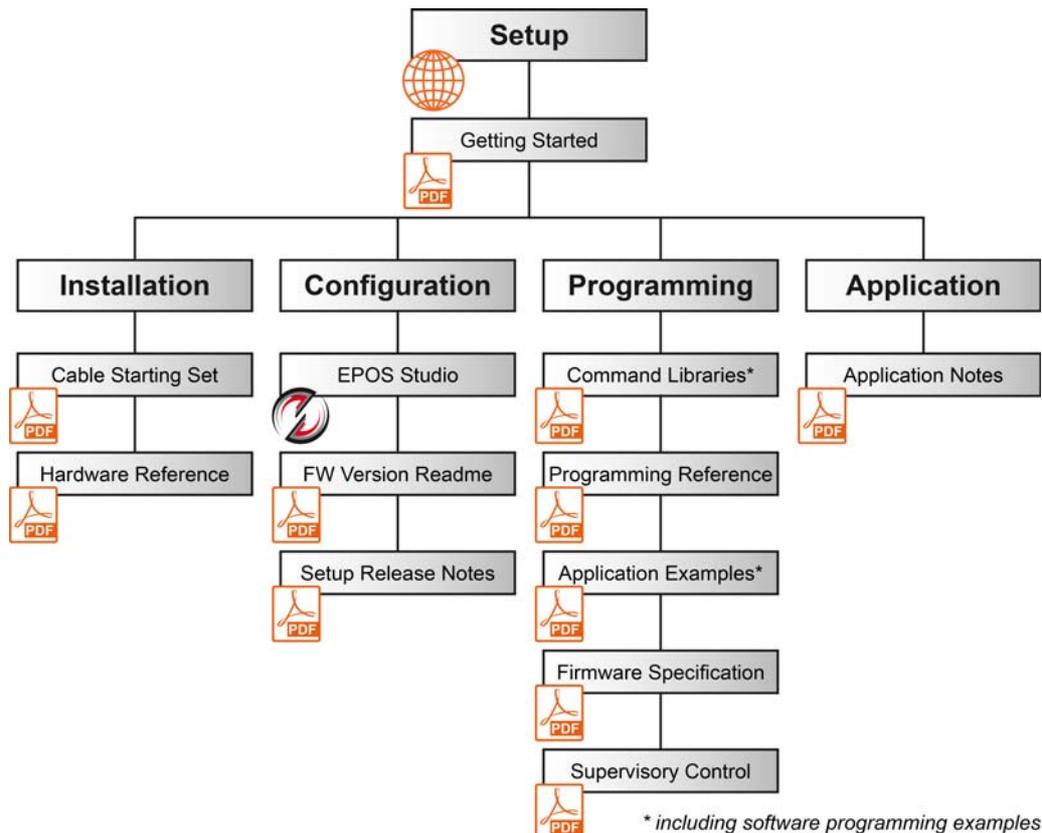


Figure 2-1 Documentation Structure

2.2 Safety Precautions

Prior continuing ...

- make sure you have read and understood chapter “ PLEASE READ THIS FIRST” on page A-2,
- do not engage with any work unless you possess the stated skills (→chapter “1.2 Target Audience” on page 1-5),
- refer to chapter “1.4 Symbols and Signs” on page 1-6 to understand the subsequently used indicators,
- you must observe any regulation applicable in the country and/or at the site of implementation with regard to health and safety/accident prevention and/or environmental protection,
- take note of the subsequently used indicators and follow them at all times.



DANGER

High Voltage and/or Electrical Shock

Touching live wires causes death or serious injuries!

- Consider any power cable as connected to live power, unless having proven the opposite!
- Make sure that neither end of cable is connected to live power!
- Make sure that power source cannot be engaged while work is in process!
- Obey lock-out/tag-out procedures!
- Make sure to securely lock any power engaging equipment against unintentional engagement and tag with your name!



Requirements

- Make sure that all associated devices and components are installed according to local regulations.
- Be aware that, by principle, an electronic apparatus can not be considered fail-safe. Therefore, you must make sure that any machine/apparatus has been fitted with independent monitoring and safety equipment. If the machine/apparatus should break down, if it is operated incorrectly, if the control unit breaks down or if the cables break or get disconnected, etc., the complete drive system must return – and be kept – in a safe operating mode.
- Be aware that you are not entitled to perform any repair on components supplied by maxon motor.



Best Practice

- For initial operation, make sure that the motor is free running. If not the case, mechanically disconnect the motor from the load.



Maximal permitted Supply Voltage

- Make sure that supply power is between 11...24 VDC.
- Supply voltages above 27 VDC will destroy the unit.
- Wrong polarity will destroy the unit.



Electrostatic Sensitive Device (ESD)

- Make sure to wear working cloth in compliance with ESD.
- Handle device with extra care.

3 Installation and Configuration

3.1 Important Notice: Prerequisites for Permission to commence Installation

The EPOS2 P 24/5 is considered as partly completed machinery according to EU directive 2006/42/EC, Article 2, Clause (g) and therefore **is only intended to be incorporated into or assembled with other machinery or other partly completed machinery or equipment.**



WARNING

Risk of Injury

Operating the device without the full compliance of the surrounding system with EU directive 2006/42/EC may cause serious injuries!

- Do not operate the device, unless you have made sure that the other machinery fulfills the requirements stated in the EU directive!
- Do not operate the device, unless the surrounding system fulfills all relevant health and safety aspects!
- Do not operate the device, unless all respective interfaces have been established and fulfill the stated requirements!

3.2 Step 1: Software Installation

Install the software from the «EPOS Positioning Controller» DVD. It contains all necessary information and tools (such as manuals, firmware, tools, Windows DLLs, drivers) required for installation and operation of the EPOS2 P Programmable Positioning Controller.



You can download the latest software version from the Internet (for URLs → chapter “2 Introduction” on page 2-9).

3.2.1 Minimum System Requirements

Component	Minimum Requirement
Operating System	Windows 10, 8, 7, XP SP3, Vista
Processor	Core2Duo 1.5 GHz
Drives	Hard disk drive, 1.5 GB available space DVD drive
Memory	1 GB RAM
Monitor	Screen resolution 1024 x 768 pixels at high color (16-Bit)
Web Browser	Internet Explorer IE 7.0

Table 3-4 Minimum System Requirements

3.2.2 Installation

- 1) **Insert «EPOS Positioning Controller» DVD** into DVD drive of your computer. Autorun will commence automatically. If autorun should fail to start, find the installation file named “EPOS Positioning Controller.msi” on your explorer, then doubleclick to start.
- 2) **Follow the instructions** during the installation program. Please read every instruction carefully. Indicate location of working directory when prompted.



Best Practice

- We recommend following location as working directory: `C:\Program Files\maxon motor ag` (note that designation of program directory may vary depending on the system language installed).

3) View new shortcuts and items in the start menu

- The files have been copied to the menu «maxon motor ag», where you can access the program as well as the entire documentation set.
 - Clicking the «EPOS Studio» shortcut on your desktop will launch the program.
- 4) If needed: Modify or remove the software.
To change application features or to uninstall the software, start the installation program «EPOS Positioning Controller.msi» anew and follow the instructions given.

3.3 Step 2: Hardware Presettings

There are three possible motor configurations:

- maxon EC motor
- maxon DC motor with separated motor and encoder cable
- maxon DC motor with integrated motor/encoder ribbon cable

For the first two configuration types, no additional presetting is required. When using **EPOS2 P 24/5 with a maxon DC motor with integrated motor/encoder ribbon cable**, you will need to perform additional presetting.



STOP!

Check on safety precautions before continuing (→page 2-10).

- 1) Open housing and find jumpers JP2 and JP3.

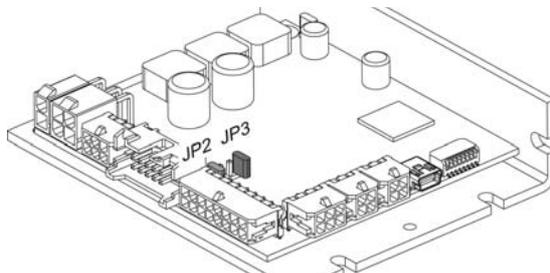


Figure 3-2 Jumpers JP2/JP3 (Location and Factory Setting)

- 2) Set jumpers JP2 and JP3 to “closed” position (→Figure 3-3):

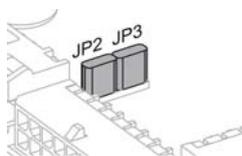


Figure 3-3 Jumpers JP2/JP3 (maxon DC motor with integrated Motor/Encoder Ribbon Cable)

3.4 Step 3: Minimum External Wiring

Wiring depends on the type of motor you are using.

- 1) Decide on type of motor you wish to connect to your EPOS2 P 24/5 Programmable Positioning Controller.
- 2) Observe notes below.
- 3) Chose applicable chapter:
 - ➔“Minimum Wiring for maxon EC motor” on page 3-14.
 - ➔“Minimum Wiring for maxon DC motor with separated Motor/Encoder Cable” on page 3-15
 - ➔“Minimum Wiring for maxon DC motor with integrated Motor/Encoder Ribbon Cable” on page 3-16



Maximal permitted Supply Voltage

- *Make sure that supply power is between 11...24 VDC.*
- *Supply voltages above 27 VDC or wrong polarity will destroy the unit.*
- *Note that necessary output current is depending on load (continuous max. 5 A; acceleration/short-time max. 10 A).*



Note

- *For every motor variant, you will find a table stating type of cable to be used and respective from/to connections as well as a corresponding illustration (at the end of this chapter).*
- *If you decide not to use ready-made maxon cables, you must perform wiring according to separate document «Cable Starting Set».*



Note

The first time the device is connected using the USB interface, a respective driver needs to be installed. For further information, please consult separate document ➔«EPOS2 USB Driver Installation» located in the folder “...\Driver Packages\EPOS2 USB Driver”.

3.4.1 Minimum Wiring for maxon EC motor

- 1) Install «EPOS2 P 24/5 Programmable Positioning Controller» (378308).
- 2) Connect maxon cable assemblies (→ Table 3-5 and Figure 3-4).

Cable		Connection	
Designation	Order #	from to
Power Cable	275829	J1	power supply +11...+24 VDC
Motor Cable	275851	J2	terminal blocks
Hall Sensor Cable	275878	J3	terminal blocks
Encoder Cable	275934	J4	encoder of the motor
USB Type A - mini B Cable	370513	J9	an available USB port of your computer

Table 3-5 Minimum Wiring: maxon EC motor

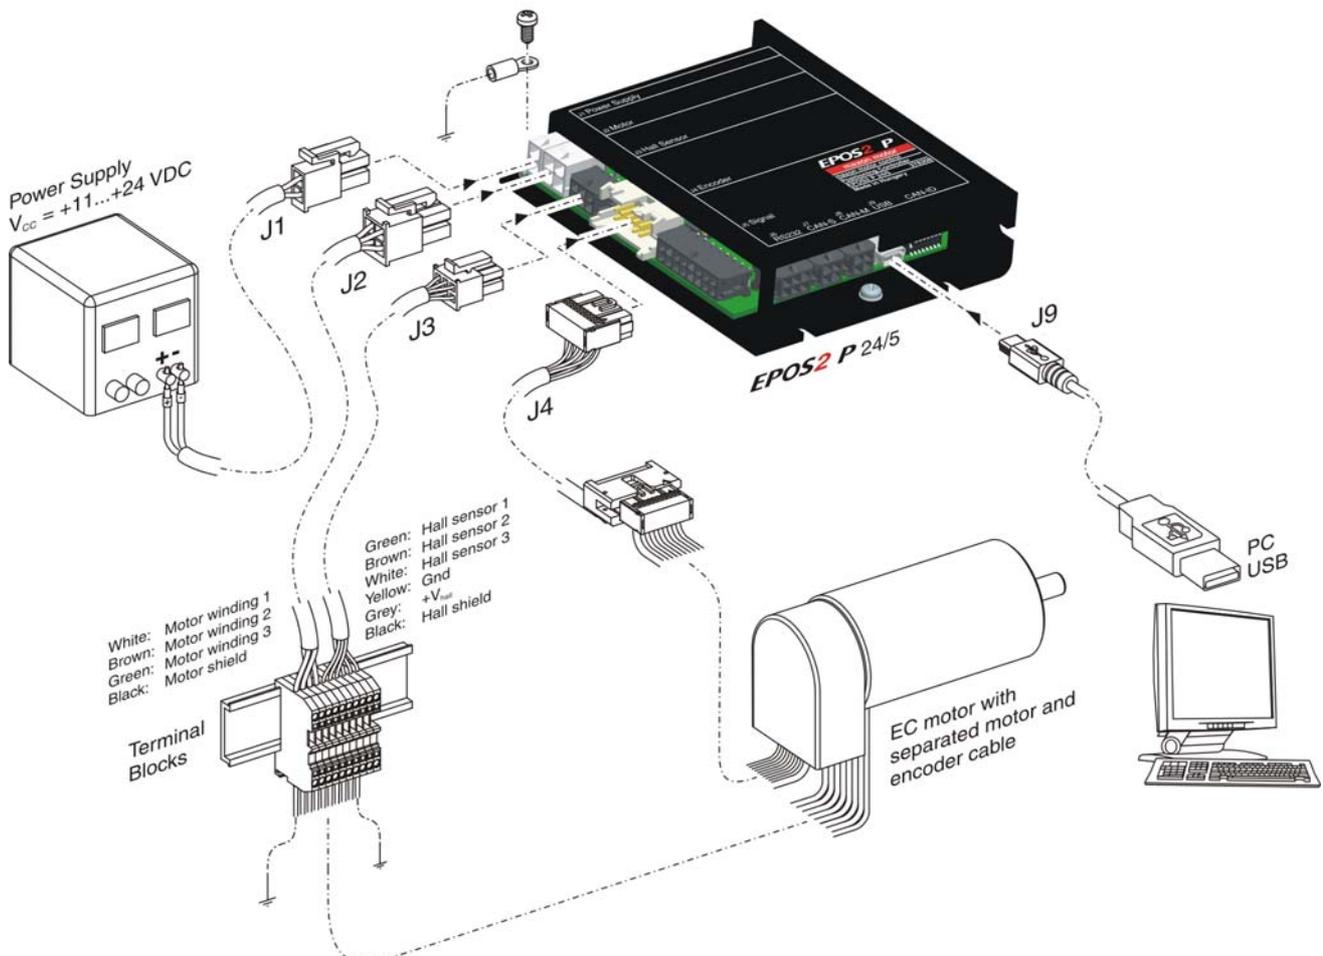


Figure 3-4 Minimum Wiring: maxon EC motor

3.4.2 Minimum Wiring for maxon DC motor with separated Motor/Encoder Cable

- 1) Install «EPOS2 P 24/5 Programmable Positioning Controller» (378308).
- 2) Connect maxon cable assemblies (→ Table 3-6 and Figure 3-5).

Cable		Connection	
Designation	Order #	from to
Power Cable	275829	J1	power supply +11...+24 VDC
Motor Cable	275851	J2	terminal blocks
Encoder Cable	275934	J4	encoder of the motor
USB Type A - mini B Cable	370513	J9	an available USB port of your computer

Table 3-6 Minimum Wiring: maxon DC motor with separated Motor/Encoder Cable

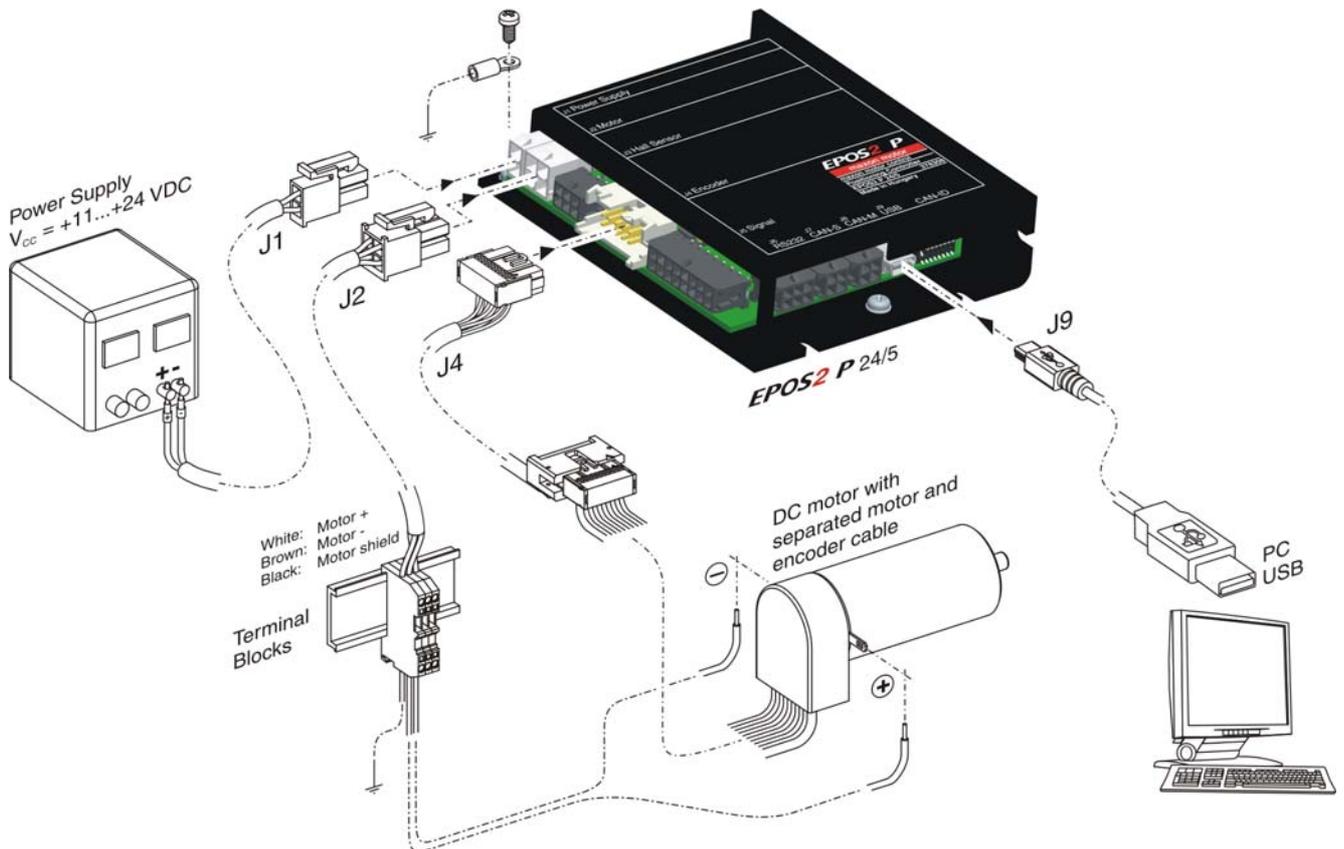


Figure 3-5 Minimum Wiring: maxon DC motor with separated Motor/Encoder Cable

3.4.3 Minimum Wiring for maxon DC motor with integrated Motor/Encoder Ribbon Cable

- 1) Install «EPOS2 P 24/5 Programmable Positioning Controller» (378308).
- 2) Connect maxon cable assemblies (→ Table 3-7 and Figure 3-6).

Cable		Connection	
Designation	Order #	from to
Power Cable	275829	J1	power supply +11...+24 VDC
Encoder Cable	275934	J4	encoder of the motor
USB Type A - mini B Cable	370513	J9	an available USB port of your computer

Table 3-7 Minimum Wiring: maxon DC motor with integrated Motor/Encoder Ribbon Cable

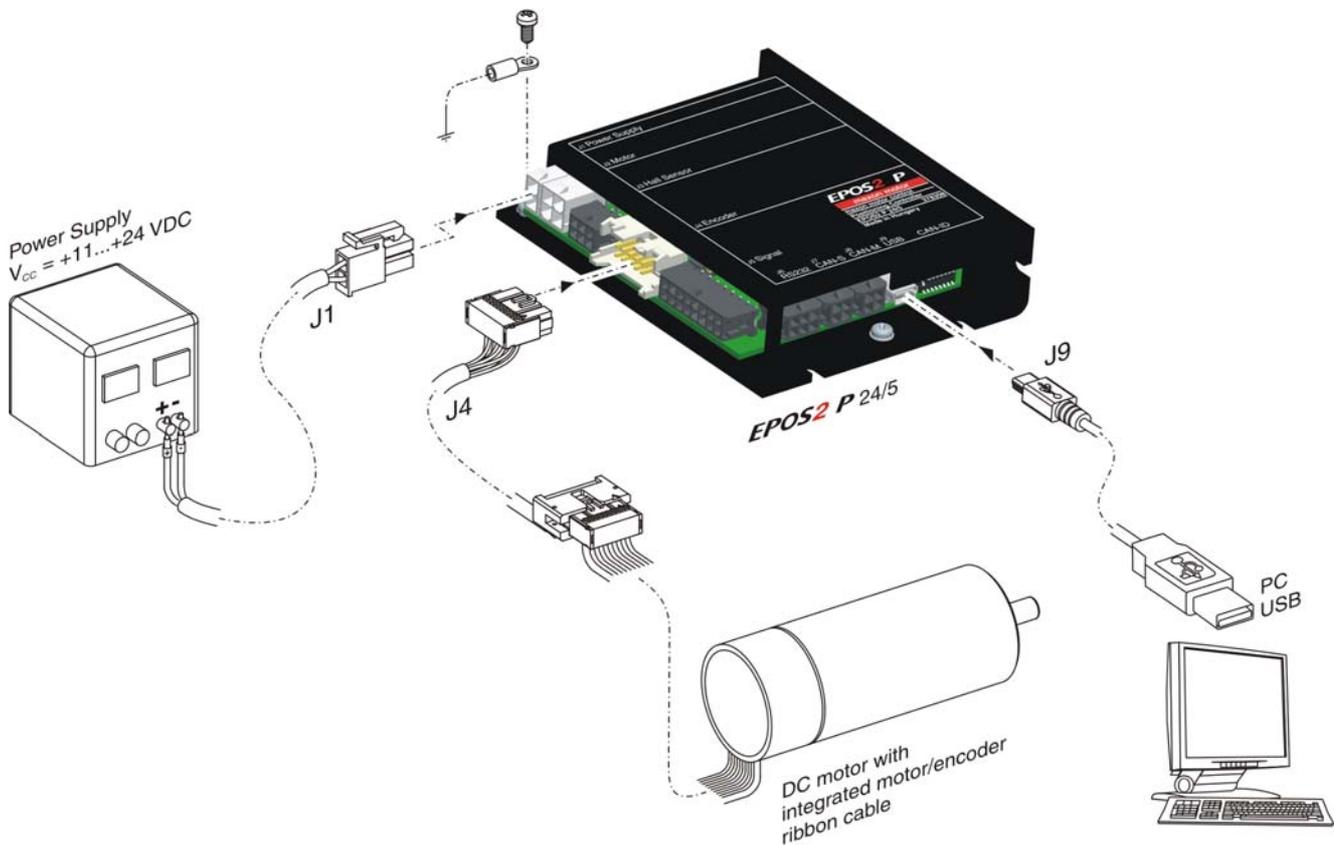


Figure 3-6 Minimum Wiring: maxon DC motor with integrated Motor/Encoder Ribbon Cable

3.5 Step 4: System Configuration



Read separate Instructions

You will need to know certain technical data of your system.

Refer to maxon catalog or respective data sheets of components used.

3.5.1 General initial Steps

- 1) Switch on EPOS2 P 24/5 power supply.
- 2) Doubleclick «EPOS Studio.exe» shortcut on your desktop.
«EPOS Studio» will start and the “New Project Wizard” will automatically be launched.
- 3) Make sure that you are using the latest version of «EPOS Studio». If you are in doubt on the version you are currently using, proceed as follows:
 - a) Click menu «Help», then select menu «About EPOS Studio». The currently installed version will be displayed.
 - b) Click one of the displayed hyperlinks to find out on the latest version available. Download the latest version, if needed.
- 4) Load an existing EPOS2 P Project:
 - a) Select «EPOS2 P Project» from list.
 - b) Click «Next» to proceed.

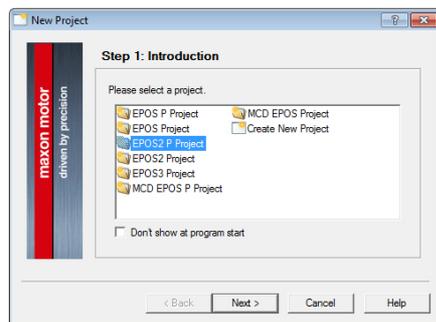


Figure 3-7 Project Configuration Dialog

- 5) Set project settings:
 - a) Click browse icon (arrow) to set path and project name for your project.
 - b) Click «Finish» to create new project.

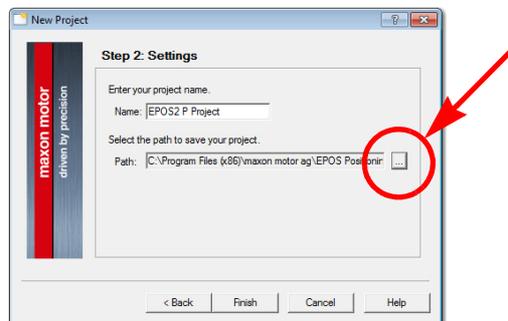


Figure 3-8 Project Path and Name

6) Clear CAN Warning:

The Project Tree will be displayed in the “Page Navigator Window”. If CAN is not connected, the warnings “CanPassiveError on CAN-S Port” and “CanPassiveError on CAN-M Port” will appear.

- a) Click right on warning.
- b) Click «Clear All Entries».
- c) If other errors or warnings appear, check wiring and startup configuration (for details on errors and warnings → separate document «EPOS2 Firmware Specification»).

Status				
Type	Node	Code	Name	Description
Warning	EPOS2 P [Node 1]	0x8120	CAN Passive Error on CAN-M Port	CAN-M Port changed to state passive
Warning	EPOS2 P [Node 1]	0x8120	CAN Passive Error on CAN-S Port	CAN-S Port changed to state passive

Figure 3-9 CAN Warnings

7) Start “Startup Wizard”:

- a) Click «Wizards».
- b) Select «EPOS2 P» from Device Selection Combo Box.
- c) Doubleclick «Startup Wizard» item in Wizard Tree (arrow).



Figure 3-10 Page Navigator Window

8) Startup Wizard (Step 1): Minimum External Wiring:

- a) Verify correct hardware installation (→chapter “3.4 Step 3: Minimum External Wiring” on page 3-13).
- b) Make sure you have read “Getting Started” and confirm by clicking “Confirm that you’ve read the “Getting Started” document”.
- c) Click “Next” to proceed.

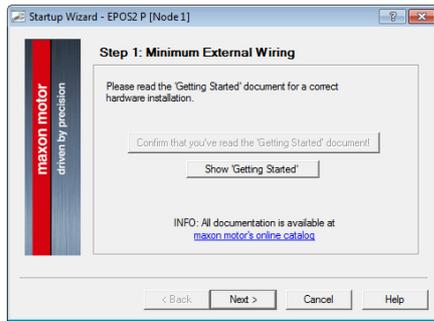


Figure 3-11 Startup Wizard Dialog: Minimum external Wiring

9) Startup Wizard (Step 2): Communication Setting:

- a) Verify correct wiring to USB interface (→chapter “3.4 Step 3: Minimum External Wiring” on page 3-13).
- b) Click “Search Communication Setting” to search USB port and to automatically adjust transfer rate (arrow).

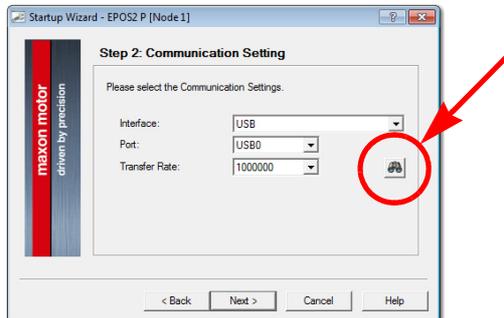


Figure 3-12 Startup Wizard Dialog: USB Communication

- c) If correct communication settings were found, a respective message will be displayed.

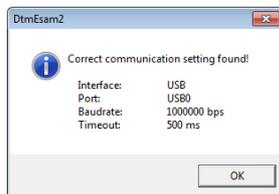


Figure 3-13 Communication Settings

- d) Click “OK” to confirm settings.
- e) Click “Next” to proceed.

10) Startup Wizard (Step 3): Motor Type

- a) Select used motor type.
- b) Click «Next» to proceed.

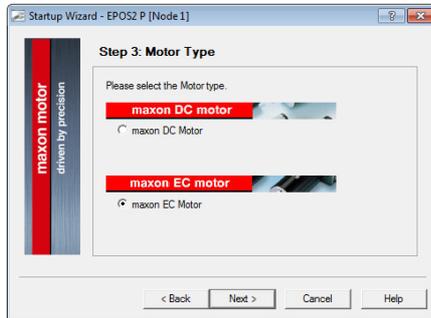


Figure 3-14 Startup Wizard Dialog: Motor Type

11) Decide on how to further proceed:

For **EC** motors:

Proceed to chapter "3.5.2 Configuration of EC Motors" on page 3-21, then continue with chapter "3.5.4 General closing Steps" on page 3-25.

For **DC** motors:

Proceed to chapter "3.5.3 Configuration of DC Motors" on page 3-23, then continue with chapter "3.5.4 General closing Steps" on page 3-25.

3.5.2 Configuration of EC Motors

- 1) Startup Wizard for EC motors (Step 4): Commutation
 - a) Select type of commutation (example: "Sinusoidal Commutation").
 - b) Click "Next" to proceed.

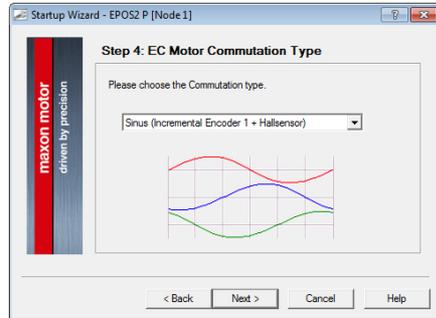


Figure 3-15 Startup Wizard Dialog for EC Motors: Commutation Type

- 2) Startup Wizard for EC motors (Step 5): Main Sensor Type
 - a) Select type of main sensor (example: "3-Channel Incremental Encoder").
 - b) Click "Next" to proceed.

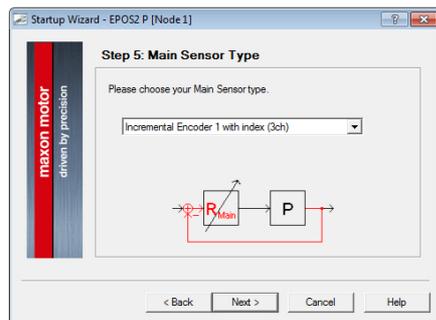


Figure 3-16 Startup Wizard Dialog for EC Motors: Main Sensor Type

- 3) Startup Wizard for EC motors (Step 6): Motor Data
 - a) Enter maximum permissible speed.
 - b) Enter nominal (maximum continuous) current.
 - c) Enter thermal time constant of motor winding.
 - d) Enter number of pole pairs.
 - e) Click "Next" to proceed.

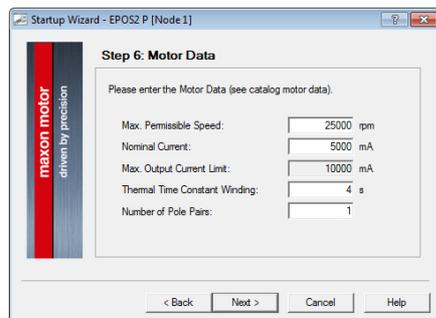


Figure 3-17 Startup Wizard Dialog for EC Motors: Motor Data

- 4) Startup Wizard for EC motors (Step 7): Incremental Encoder 1 Settings
 - a) Enter resolution of encoder used.
 - b) Click «Next» to proceed.

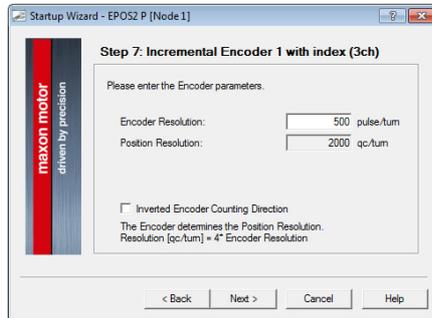


Figure 3-18 Startup Wizard Dialog for EC Motors: Incremental Encoder 1 Settings

- 5) Startup Wizard for EC motors (Step 8): Safety Parameter Position
 - a) Enter maximum permitted following error.
 - b) Click «Next» to proceed.

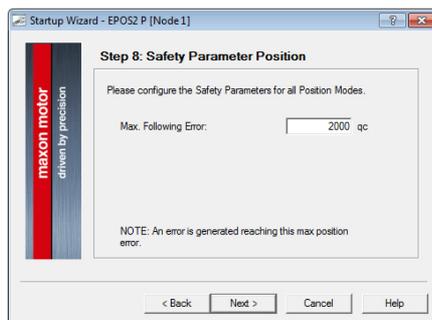


Figure 3-19 Startup Wizard Dialog for EC Motors: Safety Parameter Position

- 6) Startup Wizard for EC motors (Step 9): Configuration Summary

A short summary of most important configuration values will be displayed.

 - a) If configuration is not correct: Click «Back» to modify settings.
 - b) If configuration is correct: Click «Finish» to close the startup wizard.

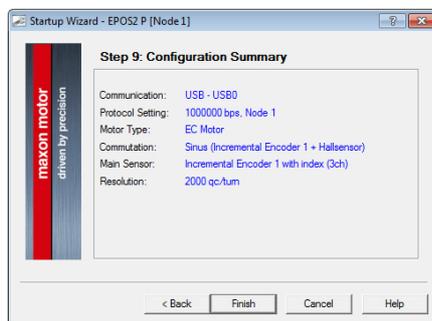


Figure 3-20 Startup Wizard Dialog for EC Motors: Configuration Summary

3.5.3 Configuration of DC Motors

- 1) Startup Wizard for DC motors (Step 4): Main Sensor Type
 - a) Select type of main sensor (example: "3-Channel Incremental Encoder").
 - b) Click "Next" to proceed.

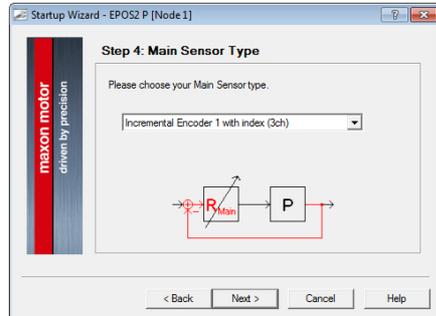


Figure 3-21 Startup Wizard Dialog for DC Motors: Main Sensor Type

- 2) Startup Wizard for DC motors (Step 5): Encoder Position
 - a) By default, no gear is used.
 - Leave "System with gear" unticked.
 - b) Click "Next" to proceed.

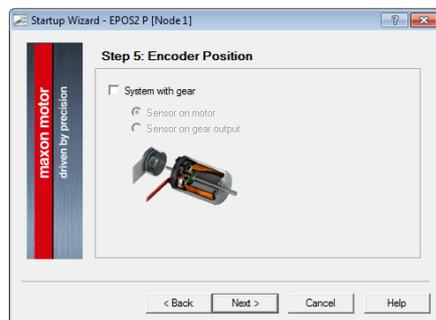


Figure 3-22 Startup Wizard Dialog for DC Motors: Encoder Position

- 3) Startup Wizard for DC motors (Step 6): Motor Data
 - a) Enter maximum permissible speed.
 - b) Enter nominal (maximum continuous) current.
 - c) Enter thermal time constant of motor winding.
 - d) Click "Next" to proceed.

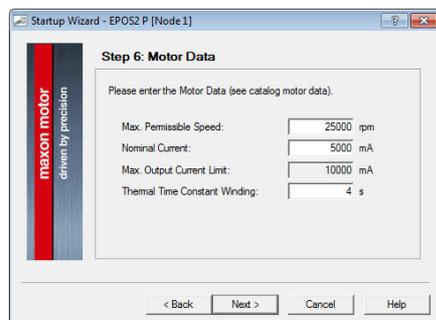


Figure 3-23 Startup Wizard Dialog for DC Motors: Motor Data

- 4) Startup Wizard for DC motors (Step 7): Incremental Encoder 1 Settings
 - a) Enter resolution of encoder used.
 - b) Click "Next" to proceed.

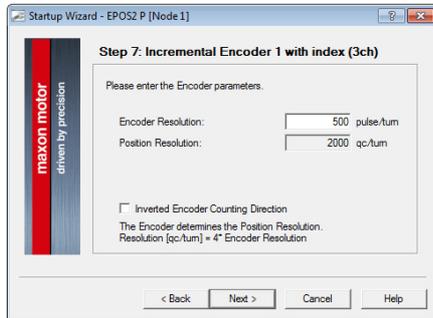


Figure 3-24 Startup Wizard Dialog for DC Motors: Incremental Encoder 1 Settings

- 5) Startup Wizard for DC motors (Step 8): Safety Parameter Position
 - a) Enter maximum permitted following error.
 - b) Click "Next" to proceed.

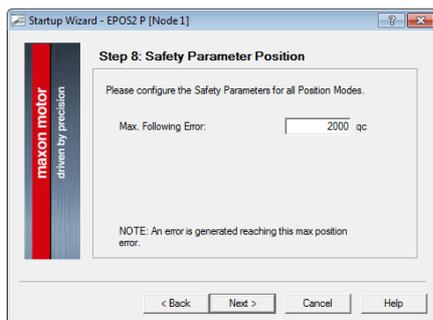


Figure 3-25 Startup Wizard Dialog for DC Motors: Safety Parameter Position

- 6) Startup Wizard for DC motors (Step 9): Configuration Summary

A short summary of most important configuration values will be displayed.

 - a) If configuration is not correct: Click "Back" to modify settings.
 - b) If configuration is correct: Click "Finish" to close the startup wizard.

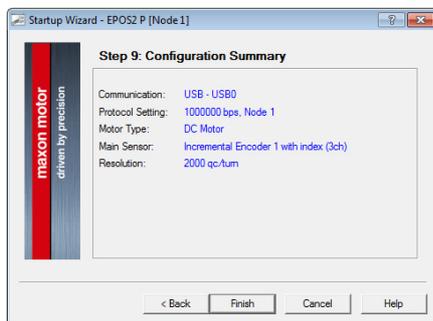


Figure 3-26 Startup Wizard Dialog for DC Motors: Configuration Summary

3.5.4 General closing Steps

- 1) Click «Yes» to accept and activate parameters.

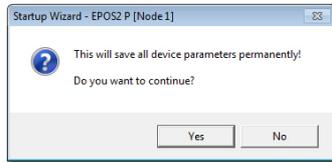


Figure 3-27 Save/activate configured Parameters

- 2) Clear CAN Warning

A warning will appear if the device is not connected to the CAN network.

 - a) Click right on warning.
 - b) Click «Clear All Entries».
 - c) If other errors or warnings appear, check wiring and startup configuration (for details on errors and warnings → separate document «EPOS2 Firmware Specification»).

Status				
Type	Node	Code	Name	Description
Warning	EPOS2 P [Node 1]	0x8120	CAN Passive Error on CAN-M Port	CAN-M Port changed to state passive
Warning	EPOS2 P [Node 1]	0x8120	CAN Passive Error on CAN-S Port	CAN-S Port changed to state passive

Figure 3-28 CAN in Error Passive Mode

- 3) Your EPOS2 P 24/5 is now ready for regulation gains tuning.

3.6 Step 5: Regulation Gains Tuning

EPOS2 P 24/5 offers a fast and reliable way to automatically tune the regulation gains of current, velocity and position regulators. The function provides a good starting point for further manual tuning.



Best Practice

- The Auto Tuning function is a good way to start, nevertheless optimal regulation parameters cannot be guaranteed.
- Use following procedure to efficiently tune regulation gains.

3.6.1 Starting Regulation Tuning

- 1) Click "Wizards" in Page Navigation Window.
- 2) Doubleclick "Regulation Tuning" item in Wizard Tree (arrow).

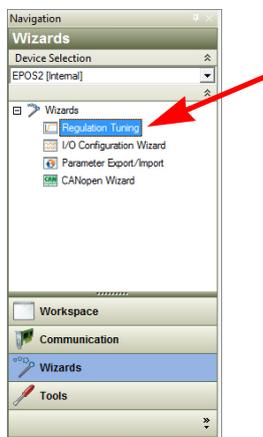


Figure 3-29 Page Navigator Window

3.6.2 Auto Tuning the Current, Velocity and Position Regulators

- 1) Select "Auto Tuning" (arrow).
- 2) Click "Next" to proceed.

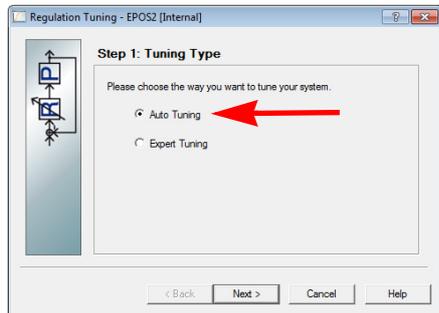


Figure 3-30 Type of Regulation Tuning

- 3) The Auto Regulation Tuning window will be displayed. The red bars indicate undimensioned regulators.

4) Click «Start» (arrow).

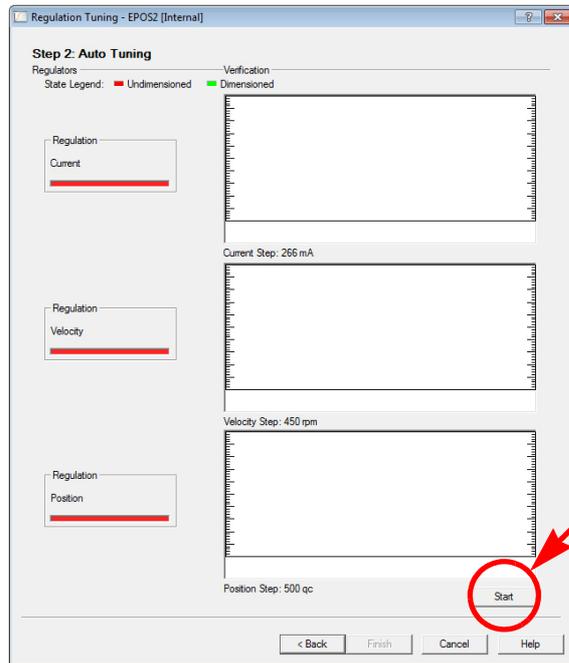


Figure 3-31 Starting Auto Tuning



CAUTION

Drawn-in and/or Affright Hazard

Unprepared attitude can lead to drawing-in or affright.

- *Remove any objects nearby and make sure none can possibly be drawn-in!*
- *Make sure that motor shaft is free running!*
- *Do not touch the motor shaft while Auto Tuning is in process – this can take up to several minutes!*

5) Consider message carefully.

- a) Make sure that motor shaft is free running.
- b) Click «Yes» to initiate Auto Tuning.

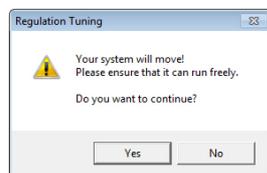


Figure 3-32 Confirmation of free running Shaft

6) Auto Tuning will now commence. In turn, for each regulator (current, velocity, position), a two step procedure will be executed:

- First, control parameters will be identified – during this process, the motor shaft will oscillate, the respective red status bar will be moving (→Figure 3-33, left).
- Then, identified control parameters will be verified by evaluating their step response – during this process, the motor shaft will oscillate, the respective green status bar will be moving (→Figure 3-33, right).

- Once suitable regulation gains were found, the respective status bar changes to green.
- Auto Tuning is complete as all three status bars changed to green (→Figure 3-34).

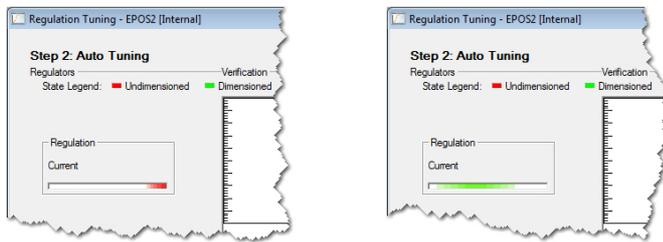


Figure 3-33 Regulation Tuning – Identification (left) / Verification (right)

7) Click «Finish» to confirm end of Auto Tuning.

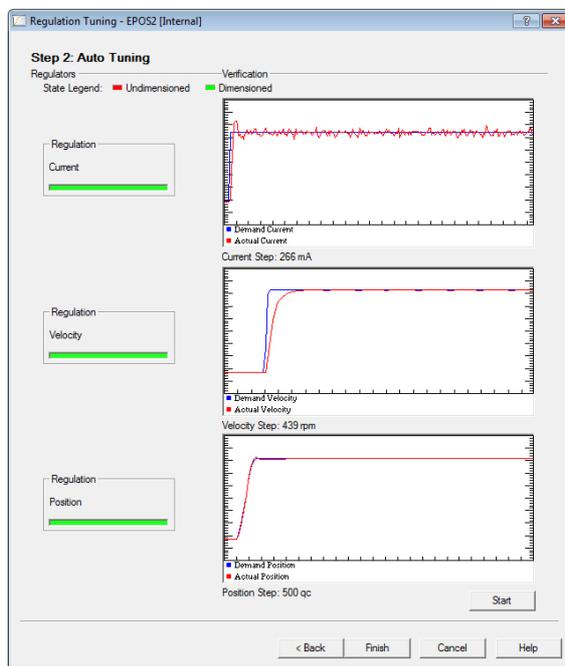


Figure 3-34 End of Auto Tuning

8) Click «Yes» to accept and save the parameters.

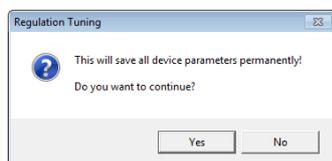


Figure 3-35 Save/activate configured Parameters

- 9) In case of error, Auto Tuning will be aborted:
 - a) Click «OK» to confirm the error message.
 - b) Repeat Auto Tuning (→step 4).
 - c) Should the error persist, use Expert Tuning (for details →separate document «Application Note EPOS2 Regulation Tuning»).

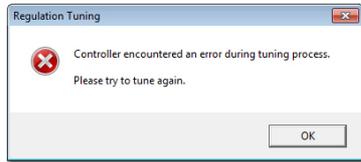


Figure 3-36 Confirm Tuning Error

- 10) The EPOS2 P 24/5 is now ready for operation in one of the supported regulation modes.

••*page intentionally left blank*••

4 Programming

4.1 Step 1: Opening Sample Project

4.1.1 Open “IEC-61131 Programming”

- 1) Select “EPOS2 P” from Device Selection Combo Box (arrow).
- 2) Doubleclick “IEC 61131 Programming” item in Tools Tree.

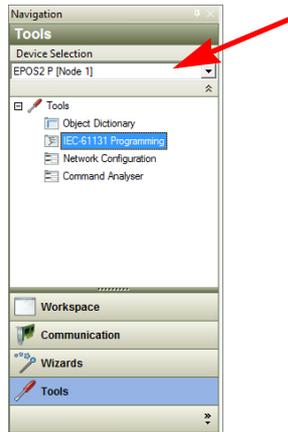


Figure 4-37 Page Navigator Window

4.1.2 Open Sample Project

- 1) Select sample project “SimpleMotionSequence”.
- 2) Click “Open Sample Project” will open external programming tool “OpenPCS”.

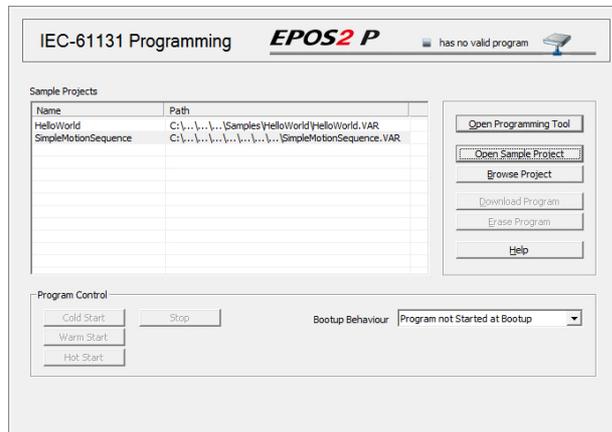


Figure 4-38 Tool “IEC-61131 Programming”

4.1.3 Open Program Code

- 1) Select tab "Files" from project window.
- 2) Doubleclick "PROG_Main.SFC" to open program code.

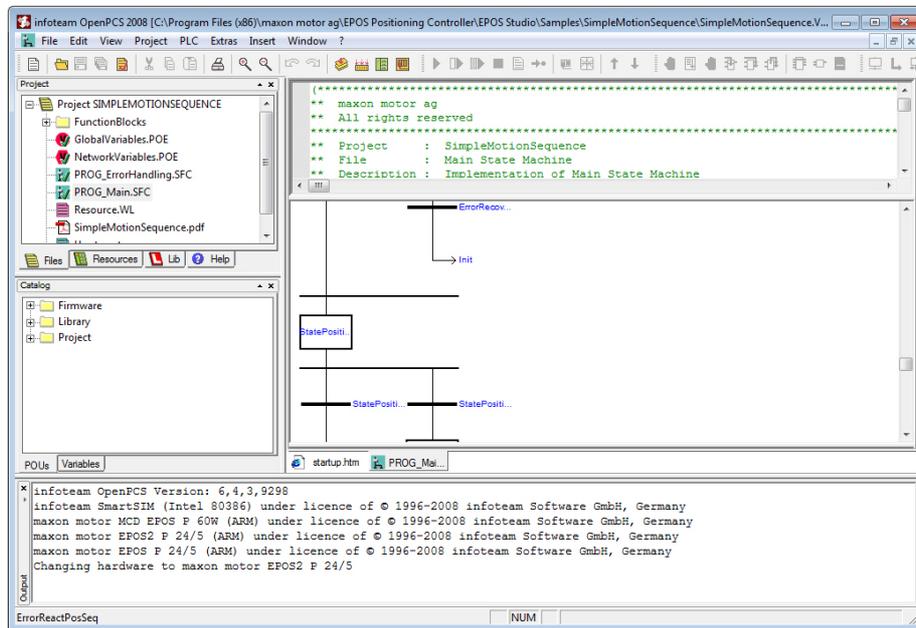


Figure 4-39 Program Code

4.2 Step 2: Programming Tool "OpenPCS" Configuration

4.2.1 Licence Key Configuration

- 1) Open menu "Extras", then submenu "Tools".
- 2) Click "License" to check if valid license is available.
If no license is registered, enter valid serial number and license key (→ "ReadMe.txt" in EPOS Studio directory).

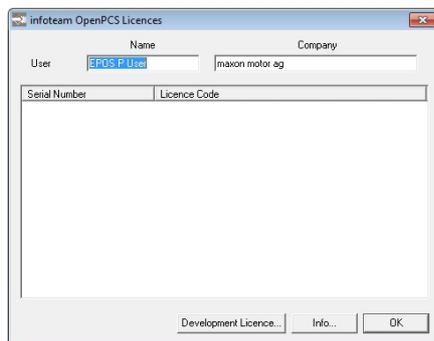


Figure 4-40 OpenPCS License Registration



If you find the license key out of date, download latest version of «EPOS Studio» from the Internet (for URLs → chapter "2 Introduction" on page 2-9).

4.2.2 Communication Setup

- 1) Open menu **PLC**, then click menu item **Connections**.
- 2) Select connection **ProxyEpos2_USB** and click **Edit**.

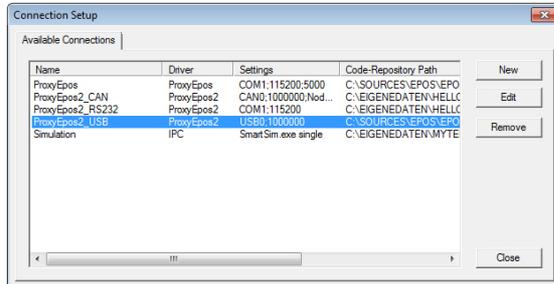


Figure 4-41 Connection Setup Window

- 3) Click **Settings**.



Figure 4-42 Edit Connection Window

- 4) Select same settings as in EPOS Studio.
- 5) Click **OK** to confirm settings and to close dialog.

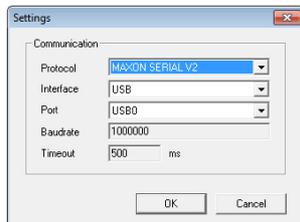


Figure 4-43 Communication Settings USB

4.3 Step 3: Compiling and Executing Sample Project

4.3.1 Compiling Sample Project

- 1) Open menu «PLC» and select menu item «Build Active Resource». A logging output similar to below figure will be displayed.

```

Code size in bytes: 27217.
Number of segments: 115.
0 error(s), 0 warning(s) - C:\PROGRAM FILES (X86)\MAXON MOTOR AG\EPOS POSITIONING CONTROLLER\EPOS STUDIO\SAMPLES\SIMPLEMOT
VARTAB32: 367 variables added in 1 segments (23045 bytes)
Executing Post-Build-Steps:
Esam2PostBuild.exe /w C:\PROGRAM FILES (X86)\MAXON MOTOR AG\EPOS POSITIONING CONTROLLER\EPOS STUDIO\SAMPLES\SIMPLEMOTIONSE
Esam2 post build process started
Use process 'C:\Program Files (x86)\maxon motor ag\EPOS Positioning Controller\OpenPCS2008\pddump32.exe'
Variable info file (C:\PROGRAM FILES (X86)\MAXON MOTOR AG\EPOS POSITIONING CONTROLLER\EPOS STUDIO\SAMPLES\SIMPLEMOTIONSEQU
Program file (C:\PROGRAM FILES (X86)\MAXON MOTOR AG\EPOS POSITIONING CONTROLLER\EPOS STUDIO\SAMPLES\SIMPLEMOTIONSEQUENCE\
Esam2 post build process finished
Total:
0 error(s) 0 warning(s)
    
```

Figure 4-44 Compiler Logging Output

4.3.2 Downloading Sample Project

- 1) Open menu «PLC» and select menu item «Online». An online connection will be established.
- 2) If new code is detected, you will be asked whether you wish to download the code or not. Click «Yes».

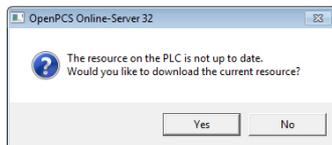


Figure 4-45 Confirmation of Code Download

4.3.3 Starting Sample Project

The following sample project is performing a motion sequence of two relative movements. Make sure the axis is free rotating.

- 1) Open menu «PLC» and select menu item «Cold Start». The program will be launched.



Figure 4-46 Cold Start

- 2) Click «STOP» to stop the program.

4.4 Further Information



If you require additional information about programming, please read separate document «EPOS2 P Programming Reference» available from «EPOS Positioning Controller» DVD or download it from the Internet (for URLs → chapter “2 Introduction” on page 2-9).

LIST OF FIGURES

Figure 2-1 Documentation Structure 9

Figure 3-2 Jumpers JP2/JP3 (Location and Factory Setting) 12

Figure 3-3 Jumpers JP2/JP3 (maxon DC motor with integrated Motor/Encoder Ribbon Cable) . . 12

Figure 3-4 Minimum Wiring: maxon EC motor 14

Figure 3-5 Minimum Wiring: maxon DC motor with separated Motor/Encoder Cable 15

Figure 3-6 Minimum Wiring: maxon DC motor with integrated Motor/Encoder Ribbon Cable . . . 16

Figure 3-7 Project Configuration Dialog 17

Figure 3-8 Project Path and Name 17

Figure 3-9 CAN Warnings 18

Figure 3-10 Page Navigator Window 18

Figure 3-11 Startup Wizard Dialog: Minimum external Wiring 19

Figure 3-12 Startup Wizard Dialog: USB Communication 19

Figure 3-13 Communication Settings 19

Figure 3-14 Startup Wizard Dialog: Motor Type 20

Figure 3-15 Startup Wizard Dialog for EC Motors: Commutation Type 21

Figure 3-16 Startup Wizard Dialog for EC Motors: Main Sensor Type 21

Figure 3-17 Startup Wizard Dialog for EC Motors: Motor Data 21

Figure 3-18 Startup Wizard Dialog for EC Motors: Incremental Encoder 1 Settings 22

Figure 3-19 Startup Wizard Dialog for EC Motors: Safety Parameter Position 22

Figure 3-20 Startup Wizard Dialog for EC Motors: Configuration Summary 22

Figure 3-21 Startup Wizard Dialog for DC Motors: Main Sensor Type 23

Figure 3-22 Startup Wizard Dialog for DC Motors: Encoder Position 23

Figure 3-23 Startup Wizard Dialog for DC Motors: Motor Data 23

Figure 3-24 Startup Wizard Dialog for DC Motors: Incremental Encoder 1 Settings 24

Figure 3-25 Startup Wizard Dialog for DC Motors: Safety Parameter Position 24

Figure 3-26 Startup Wizard Dialog for DC Motors: Configuration Summary 24

Figure 3-27 Save/activate configured Parameters 25

Figure 3-28 CAN in Error Passive Mode 25

Figure 3-29 Page Navigator Window 26

Figure 3-30 Type of Regulation Tuning 26

Figure 3-31 Starting Auto Tuning 27

Figure 3-32 Confirmation of free running Shaft 27

Figure 3-33 Regulation Tuning – Identification (left) / Verification (right) 28

Figure 3-34 End of Auto Tuning 28

Figure 3-35 Save/activate configured Parameters 28

Figure 3-36 Confirm Tuning Error 29

Figure 4-37 Page Navigator Window 31

Figure 4-38 Tool “IEC-61131 Programming” 31

Figure 4-39 Program Code 32

Figure 4-40 OpenPCS License Registration 32

Figure 4-41 Connection Setup Window 33

Figure 4-42 Edit Connection Window 33

Figure 4-43	Communication Settings USB	33
Figure 4-44	Compiler Logging Output	34
Figure 4-45	Confirmation of Code Download	34
Figure 4-46	Cold Start	34

LIST OF TABLES

Table 1-1	Notations used in this Document	5
Table 1-2	Symbols & Signs	6
Table 1-3	Brand Names and Trademark Owners.	7
Table 3-4	Minimum System Requirements.	11
Table 3-5	Minimum Wiring: maxon EC motor	14
Table 3-6	Minimum Wiring: maxon DC motor with separated Motor/Encoder Cable	15
Table 3-7	Minimum Wiring: maxon DC motor with integrated Motor/Encoder Ribbon Cable.	16

INDEX

A

additionally applicable regulations **10**
alerts **6**
applicable EU directive **11**
Auto Tuning **26**

C

cables
 maxon DC motor (integrated motor/encoder ribbon cable) **16**
 maxon DC motor (separated motor/encoder cable) **15**
 maxon EC motor **14**
CANopen **18**
communication
 port **19**
communication setup **33**
configuration
 motor **12**
 OpenPCS license key **32**
 system **17**
country-specific regulations **10**
Current Regulator, tune **26**

E

ESD **10**
EU directive, applicable **11**

H

how to
 find OpenPCS license key **32**
 interpret icons (and signs) used in the document **6**
 program motion sequences **31**
 setup USB port **19**
 tune regulation gains **26**
 use OpenPCS **31**

I

IEC-61131 **31**
incorporation into surrounding system **11**
informatory signs **6**
intended purpose **9**

J

jumper settings **12**

M

mandatory action signs **6**

O

operating license **11**
other machinery (incorporation into) **11**

P

precautions **10**
prerequisites prior installation **11**
presetting hardware **12**
programming with OpenPCS **32**
programming, example **31**
prohibitive signs **6**
purpose
 of the device **9**
 of this document **5**

R

regulation gains, tune **26**
regulations, additionally applicable **10**

S

safety alerts **6**
safety first! **10**
Sample Project
 execute **34**
 open **31**
signs used **6**
symbols used **6**
system requirements (PC) **11**

T

tuning
 automatic **26**
 regulation gains **26**

U

USB interface (setup) **19**

W

wiring **13**

••*page intentionally left blank*••

© 2016 maxon motor. All rights reserved.

The present document – including all parts thereof – is protected by copyright. Any use (including reproduction, translation, microfilming and other means of electronic data processing) beyond the narrow restrictions of the copyright law without the prior approval of maxon motor ag, is not permitted and subject to persecution under the applicable law.

maxon motor ag

Brünigstrasse 220
P.O.Box 263
CH-6072 Sachseln
Switzerland

Phone +41 41 666 15 00

Fax +41 41 666 16 50

www.maxonmotor.com